

# **Operating Manual**

**Radon Echo** 

0-10 V

**REC** 2B20540



### Radon Echo - 2B20540



# **CONTENT**

Content	2
1. Application Area	3
2. Warranty & Liability	
3. Delivery content	
4. Technical Data	
Technical Data	3
Dimensions	4
5. Operation	
LED	
Dipswitch	5
Examples	
Test switch	
Terminal block	
6. Safety instructions	
7. Contact	



### 1. APPLICATION AREA

The Operating Manual contains technical data, installation- and wiring instructions for the radon based motor controller REC.

The 2Best REC is a radon sensor with an analogue control output suited to easily and quickly upgrade ventilation systems to incorporate contamination based ventilation. It can control external consumers with a power supply of 12V to 35V DC with its easy to switch thresholds. The 2Best REC supports a wide variety of standard ventilation units and systems in housing, cellars, storage, air dehumidification, and radon decontamination in all types of buildings and usage. Simple design and easy commissioning make him flexible and reliable.

### 2. WARRANTY & LIABILITY

2Best Trust Hungary KFT grants a two-year warranty for fabrication errors on parts of the product. Maintainance and repair may only be performed by authorized personnel.

Warranty ceases in case of:

- Unauthorized or improper usage, maintainance, or repair
- changes to the product performed improperly or by unautorized personnel

### 3. DELIVERY CONTENT

• 1x motor controller


### 4. TECHNICAL DATA

### TECHNICAL DATA

power supply	12 ± 0.1 VDC or 14 35 VDC
control output	1 10 VDC
electrical data	60 mA; 0.7 2.0W
lower threshold values	125 300 Bq/m <sup>3</sup>
lower threshold	25 Bg/m <sup>3</sup>
increments	25 Bq/III°
upper threshold values	1,300 3,000 Bq/m <sup>3</sup>
upper threshold increments	200 / 300 Bq/m <sup>3</sup>
measurement method	pulsed ion chamber
accuracy	> 85%
sensitivity	< 0.02 Bq/m <sup>3</sup>
intervall	10 minutes
value method	moving average 1 hour




### **DIMENSIONS**

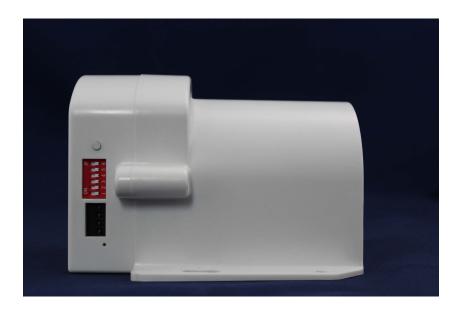

W x H x D: 126 x 87 x 107 mm

# **5. OPERATION**

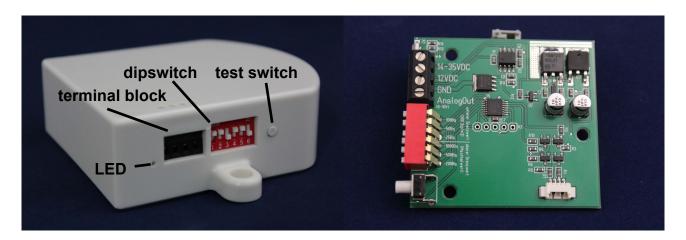

### **LED**

The indicator light on the side of the device indicates its status. The table shows the possible states and their indicator sequence.

color / sequence	status	
continuous green	controller active, values under threshold	
flashing green and yellow	controller error	
continuous yellow	controller active, values above threshold	




### **DIPSWITCH**

Via dipswitches on the side of the device, the lower and upper thresholds can be set. Upon reaching the lower threshold, a voltage is applied to the analogue control output. The voltage is linear until it reaches 10 V on a contamination equal to the upper threshold.

These are the standard values:

**Lower threshold:** 300 Bq/m<sup>3</sup> **Upper threshold:** 1,300 Bq/m<sup>3</sup>

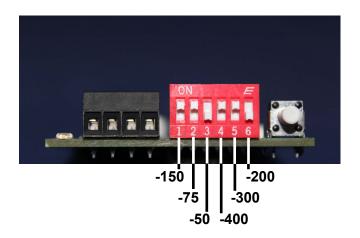

picture: Lower Threshold 75 Bq/m³, Upper Threshold 600 Bq/m³

You can manipulate the threshold values by adjusting the dipswitches. The left three switches correspond to the lower threshold, the right three switches to the upper threshold.

Please note, that both threshholds will be adjusted downwards.

### **EXAMPLES**

lower threshold	switch sequence	upper threshold	switch sequence
300	OFF   OFF   OFF	1,100	OFF   OFF   ON
150	ON   OFF   OFF	800	OFF   ON   ON
75	ON   ON   OFF	700	ON   OFF   ON




### **TEST SWITCH**

A white test switch on the side of the device can be used to confirm correct operation of the controller. When pressed, the LED indicates testing mode with a continuous yellow light and a voltage of 5V DC is applied on the analogue control output.

#### TERMINAL BLOCK

Wire connections are protected against polarity reversal.

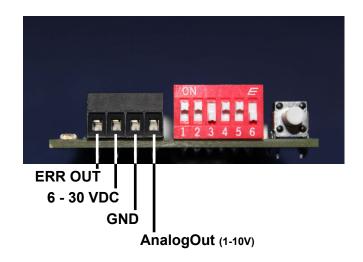

Wire connections are, as shown above, from left to right:

**ERR OUT:** Low resistance in normal operation, high resistance in case of error. **6 - 30 VDC:** voltage input for ventilation units with an appropriate power supply

**GND:** ground

**AnalogOut:** Analogue control output for 1 - 10 V control wire.

### 6. SAFETY INSTRUCTIONS

- 1. Disconnect all electrical parts from power grid completely before any installation, maintainance, or repair work! Wait for all fans and lights to shut off!
- 2. All installed parts must be visually inspected before electrical installation!
- 3. Controlers or ventilation units my not be operated in fire or explosion hazardous environments!
- 4. Ventilation systems must be ensured to not cause gas recirculation or reverse currents. Disregard endangers life!

### 7. CONTACT



2Best Trust KFT 9936 Kisrákos Fő út 47 Hungary

Tel.: +49 (0) 351 / 4188 6754 1 Fax.: +49 (0) 351 / 4188 6754 9 Email: 2best.hu@gmail.com